

# PERRIN

## Hella Horn Mount for 08-14 WRX/STI

2014-11-25

Thank you for purchasing this PERRIN product for your car! Installation of this product should only be performed by persons experienced with installation of aftermarket performance parts and proper operation of high performance vehicles. If vehicle needs to be raised off the ground for installation, the installer must use proper jacks, jack-stands and/or a professional vehicle hoist for safety of the installer and to protect property. If the vehicle is lifted improperly, serious injury or death may occur! Please read through all instructions before performing any portion of installation. If you have any questions, please contact our tech department prior to starting installation. We can be reached in any of the following methods:


Email [Tech@PERRINperformance.com](mailto:Tech@PERRINperformance.com)  
Instant Chat off the main page of [www.PERRINperformance.com](http://www.PERRINperformance.com)  
Or simply call our tech team at 503-693-1702

### Parts Included with the PERRIN Hella Horn Mount:

- (1) PERRIN Horn Bracket
- (2) M8 SS Washers

### Installation of PERRIN Hella Horn Mount:

- 1) Using below picture for reference, locate radiator support bracket where OEM horn is mounted.
- 2) Using 12mm wrenches, reach up through lower grill and remove 12mm bolts from radiator support and 12mm bolt from horn mount.

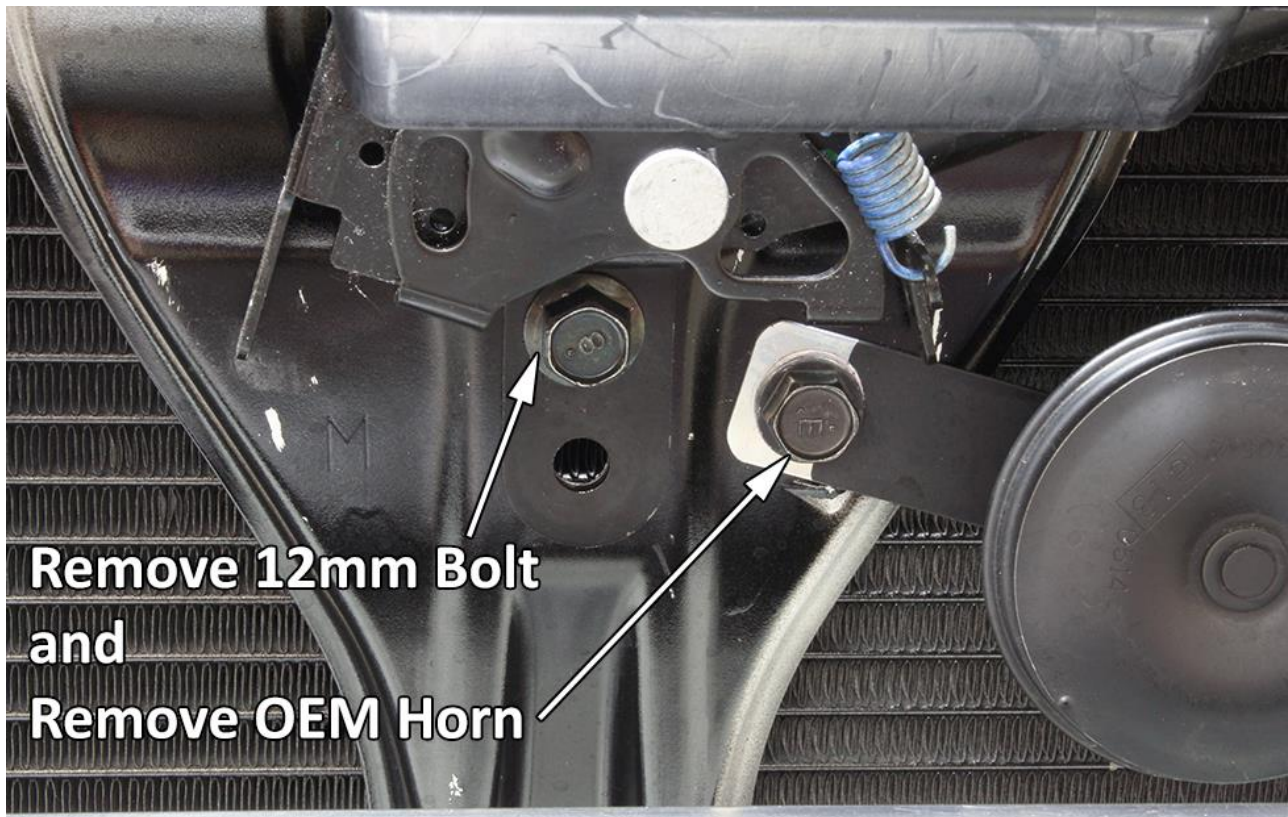

- 3) Consult Hella Horn instructions to determine how they need to be electrically installed. **Note: Do this step before mounting bracket to car as this will allow for easier way to connect both horns electrically. OEM horn wires can be used to trigger aftermarket horn relay but can't be used to drive horns directly.**
- 4) Remove flat brackets from Horns if they are already installed. The nuts on these are very tight and may require a vice to hold bracket while loosening.
- 5) Install horns to PERRIN Mount using supplied M8 washers behind nuts.
- 6) Install PERRIN Horn bracket and secure to car using 12mm bolts removed earlier.

- 7) Make any final adjustments to horn location and tighten 13mm nuts securing horns to bracket.
- 8) Connect horns electrically following diagrams supplied with horns.
- 9) Test to ensure horns function as desired.



For questions & comments please contact [TECH@PERRINPERFORMANCE.COM](mailto:TECH@PERRINPERFORMANCE.COM)  
503-693-1702  
See Website For Instant Chat Options