


Instructions for Mounting Primitive™ Rear Sway Bar mount spacer 2018+ Crosstrek & 2019+ Forester


PLEASE BE SAFE! Make sure your car is securely raised on jack-stands and just to be sure, give it good shake. Remember you'll be under your car...

1. Remove the rear wheels.
2. Mark the sway bar end links as right and left and then remove them.

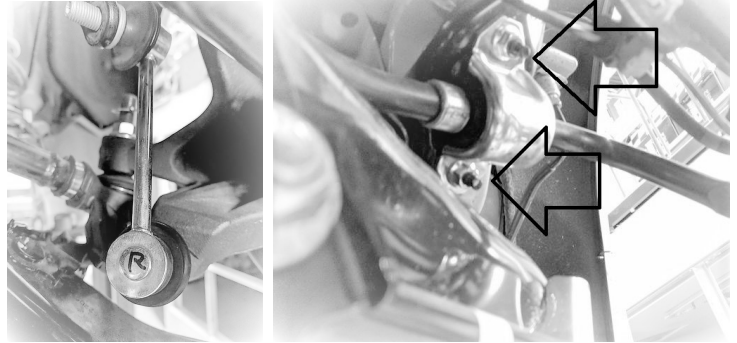

3. Remove both sway bar bushing mounts, two 12mm headed nuts attach each of them.

4. With the sway bar resting on the rear sub-frame install the sway bar mount spacers re-using the 12mm headed nuts removed in step 3, note spacer orientation. (torque to 11-14ftlbs)

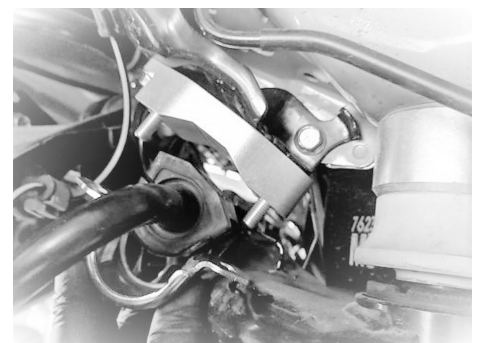

5. Re-install the sway bar bushing mounts using the supplied 12mm headed nuts, do one side at a time, only tightening by hand until both sides are in place. Once both sides are hand tight go back and torque all four nuts to 11-14ftlbs.



6. Re-install the rear sway bar endlinks on there corresponding sides and torque the 14mm headed nuts to 22-33ftlbs.

www.get-primitive.com