

IMF106



2024+ SUBARU CROSSTREK MUD FLAP INSTALLATION INSTRUCTIONS
















Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools 10mm/11mm wrench, Phillips screwdriver, pick.

Install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages naturally.

MF106 KIT CONTENTS CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION		
MUD FLAP PN: MF106 SEE PAGE 3	PART DESCRIPTION	QUANTITY
MF106-LF	LEFT FRONT	1
MF106-RF	RIGHT FRONT	1
MF106-LR	LEFT REAR	1
MF106-RR	RIGHT REAR	1
BRACKET PN: BMF106		
BMF106-FRT 	BRACKET FRONT	2
BMF106-LR 	BRACKET LEFT REAR	1
BMF106-RR 	BRACKET RIGHT REAR	1
HARDWARE PN: HMF106		
1.5SS 	SCREW	8
BLKNUT 	NUT	2
BMF106-ST-L 	STICKER LEFT FRONT	1
BMF106-ST-R 	STICKER RIGHT FRONT	1
HXBLT 	BOLT	2
INS5 	INSERT	2
POLCLP 	CLIP	8
SMF29-1 	SPACER	4
SMWASH 	WASHER	12
SSLNUT 	LOCKNUT	2

2024+ SUBARU CROSSTREK MUD FLAP INSTALLATION INSTRUCTIONS

FRONT FLAP To access interior wheel well, turn steering wheel towards installation side. Do not fully tighten fasteners until mud flap is completely aligned to vehicle.

Bracket/Hardware for 1 Flap → 1 x BMF106-FRT; 1 x BMF106-ST-L/R; 2 x 1.5SS; 1 x BLKNUT; 1 HXBLT; 2 x POLCLP; 2 x SMF-29-1; 3 x SMWASH

FIGURE A Remove factory fasteners 1 & 2. Temporarily remove and retain 3.

FIGURE B Lift liner away to install POLCLP over mounts 1 & 2. Replace liner.

FIGURE C Reinstall factory fastener 3. Adhere SMF29-1 on liner mounts 1 & 2.


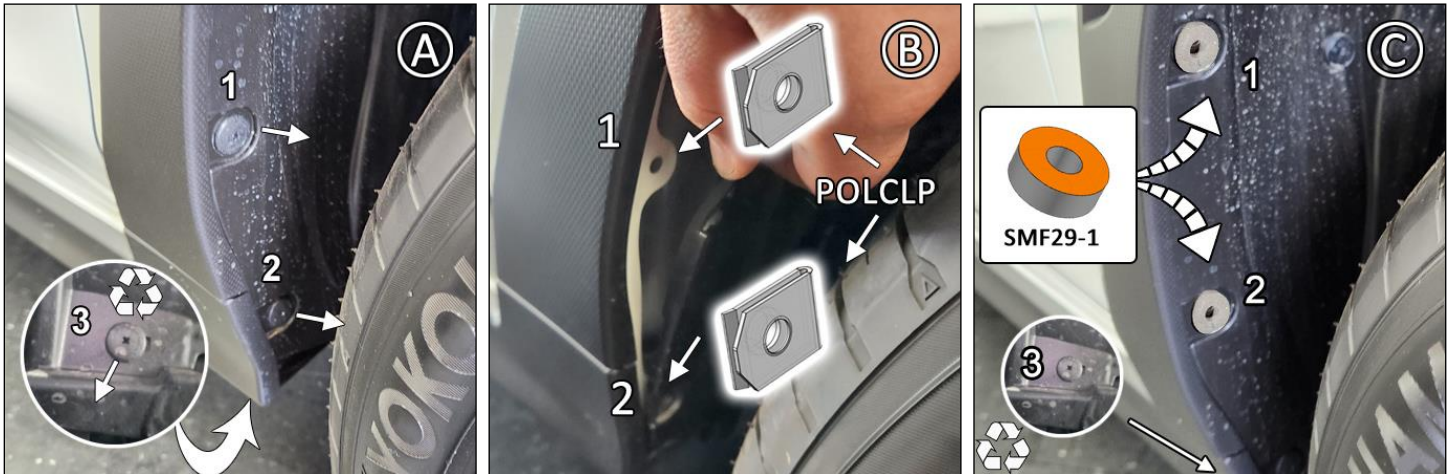


FIGURE D/E Place BMF106-FRT on logo-side of flap, then adhere BMF106-ST-L/R to BMF106-FRT side facing rear bumper. Install SMWASH & 1.5SS through mounts 1 & 2 and SMWASH & HXBLT through flap/bracket mount 4. Secure with BLKNUT.

FIGURE F For vehicles with varying offsets and tire widths, bend lower section of BMF106-FRT towards rear bumper to create more clearance. Align flaps to even ground before tightening fasteners until washers are just seated.

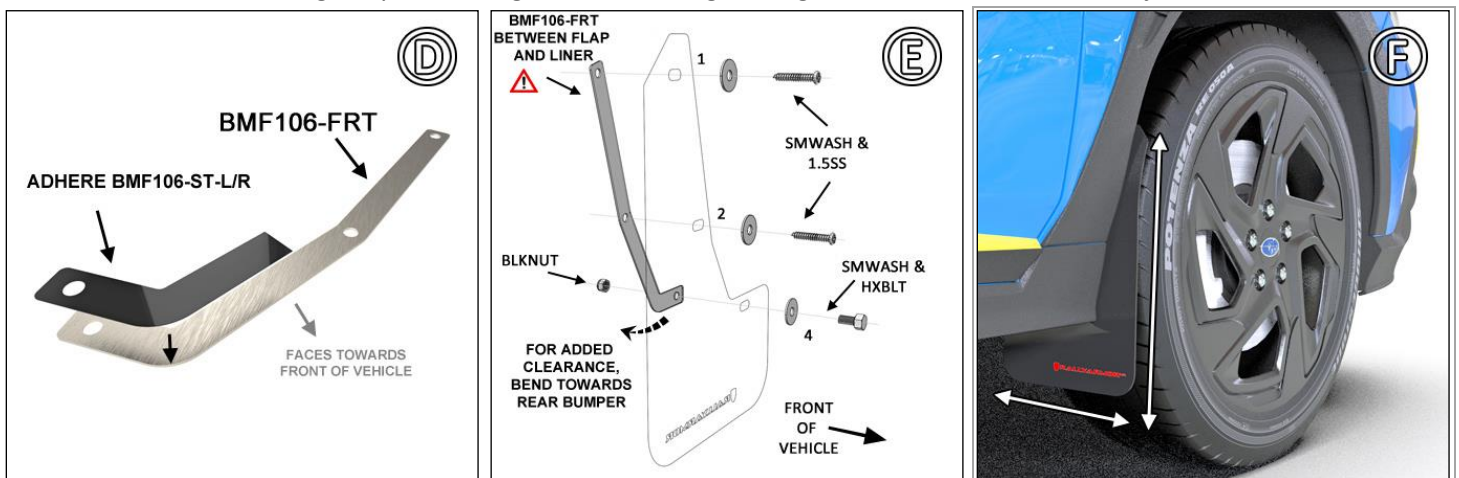

REAR FLAP Do not fully tighten fasteners until mud flap is completely aligned to vehicle.

Bracket/Hardware for 1 Flap → 1 x BMF106-LR/RR; 2 x 1.5SS; 1 x INS5; 2 x POLCLP; 1 x SSLNUT; 3 x SMWASH

FIGURE G Install POLCLP over mounts 1 & 2. Remove factory fastener 3.

FIGURE H Stud facing tire, install BMF106-LR/RR between bumper and liner. Secure with INS5.


FIGURE I Logo-side of flap facing rear bumper, install SMWASH & 1.5SS into mounts 1 & 2. Secure mount 4 with SMWASH

IMF106



2024+ SUBARU CROSSTREK MUD FLAP INSTALLATION INSTRUCTIONS

& SSLNUT. Align mud flaps to even ground. Tighten fasteners only until washers seated against mud flap.

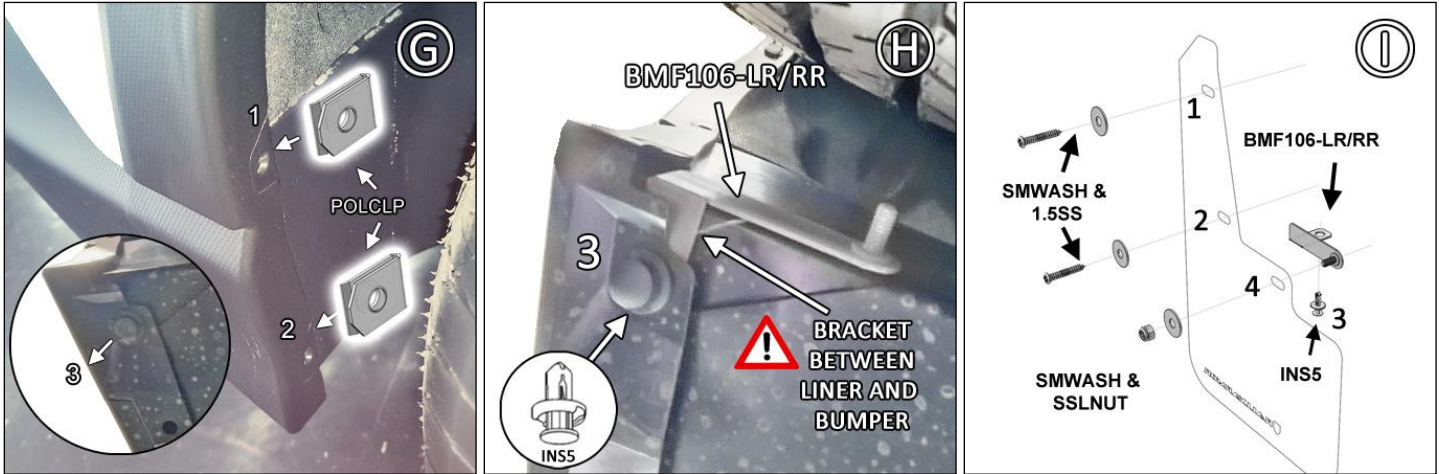

FRONT

MF106 MOUNTING DIAGRAM

REAR

